
TECHNICAL SERVICE BULLETIN

Part #:	MPI-02162016	Engine:	6.6L Duramax
Date:	02/17/2016	Title:	Duramax Oil Pump Installation

Lubricate the oil pump with motor oil prior to assembly and priming.

ATTENTION

Install the oil pump to the engine and tighten the oil pump mounting bolts to 15 FT LBS.

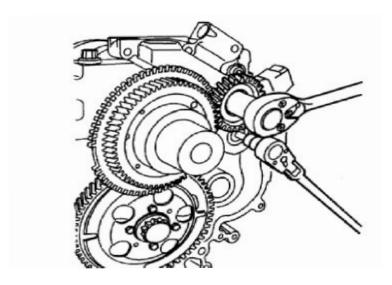

While holding the oil pump idler gear shaft with a hex driver, as shown in above figure, tighten the oil pump drive gear nut to 74 FT LBS.

<u>**DO NOT**</u> over-tighten the drive gear nut as this may result in catastrophic failure of the internal oil pump gears.

PAGE 1 OF 1