

TECHNICAL SERVICE BULLETIN

| | | | |
|---------|--------------|---------|-----------------------------------------------------------|
| Part #: | RMS-10102019 | Engine: | Cummins |
| Date: | 10/10/2019 | Title: | Front Gear Train Rear Main Seal Installation Instructions |

ALL 5.9L, 6.7L or 8.3L CUMMINS LONG BLOCKS THAT REQUIRE A SINGLE LIP DRY CLUTCH SEAL SHIP WITH A #3926126 REAR SEAL & SLEEVE KIT. LISTED BELOW ARE THE CUMMINS SERVICE MANUAL INSTRUCTIONS AND TOOLING PART NUMBERS FOR THE CORRECT INSTALLATION PROCEDURE. THIS TOOL IS ALSO REQUIRED FOR THE REAR SEAL INSTALLATION IN A WET FLYWHEEL HOUSING APPLICATION.

Note: Use service tool, Part Number 3824078, to install the crankshaft seal/wear sleeve assembly.

| Reference Number | Part Number | Description |
|------------------|-------------|-------------|
| 1 | 3163734 | Plate |
| 2 | 3163628 | Stud |
| 3 | 3163741 | Hex Nut |

1) Install two (2) threaded studs into the crankshaft cap screw holes.

2) Apply a small amount of clean 15W-40 engine oil to the crankshaft, threaded studs, and the inside of the crankshaft rear seal/wear sleeve installation tool.

3) Position the chamfered end of the wear sleeve (A) onto the end of the crankshaft (B).

4) Position the counterbore end of installation tool (C) over threaded studs and align with the wear sleeve, perpendicular to the end of the crankshaft.




5) Install the washers (D) and nuts (E) onto the threaded studs

6) Alternately tighten the nuts 1/2 of a turn until the installation tool contacts the end of the crankshaft.

Do **not** exceed 1/2 of a turn of each nut to prevent wear sleeve binding and irregular stretch.

Torque Value: 20 n.m [177 ft-lb]

Remove the installation tool and the threaded studs.

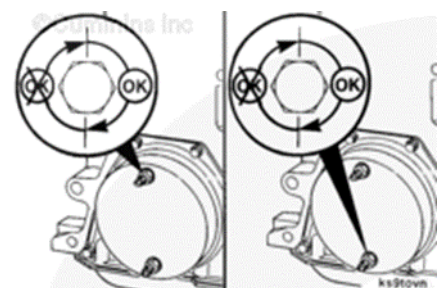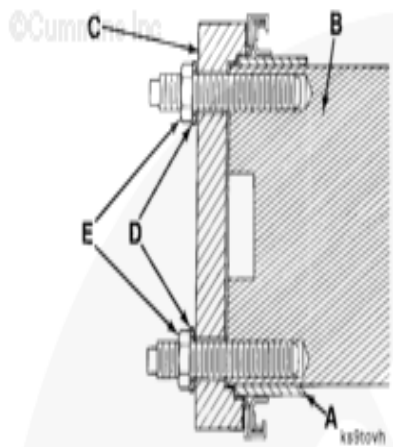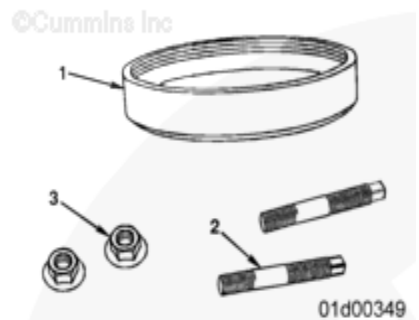

Note: The illustration shows a front gear train application with a rear crankshaft seal carrier. For rear gear train engines, refer to TSB# CRGT0318 (5.9L) or TSB# 67CRGT0519 (6.7L) installation instructions.